

DEFENDER

FITTING INSTRUCTIONS



64-FWA - Discovery 1 3dr 50mm set
65-FWA - Discovery 1 5dr 50mm set

66-FWA - Discovery 1 3dr 75mm set
67-FWA - Discovery 1 5dr 75mm set

68-FWA - Defender +2" set
69-FWA - Defender +2" front pair

70-FWA - Discovery 2 50mm set
71-FWA - Discovery 2 75mm set



Flexi Arches

Our arches are manufactured in the UK using a unique blend of plastic materials specifically manufactured for flexi arches giving them a virtually indestructible compound.

Manufactured in the UK
by Flatdog UK Ltd

Manufactured in the UK
by Flatdog UK Ltd

Thank you for purchasing Flexi wide wheel arches.

This kit should include :

- 28 - self tappers / 28 - black caps
- 1 length of sealing strip.
- 4 arches

Tools Required



1. The 4 arches supplied include 2 rear arches which are identical and 2 front arches that are handed, they curl slightly around the front wing of the vehicle.



2. Pre-drill the arch screw recess's using a 2mm drill bit, then offer up to the vehicle. When you are happy with the position mark the screw hole positions to the vehicle using a small screwdriver or scribe.




3. Remove the arch and with a 2mm drill bit drill through the wing on all positions.



4. After drilling all the screw holes fit the seal to the arch and trim to size with scissors.



5. Using the black caps and screws attach the arch to the vehicle making sure the seal is still in place.

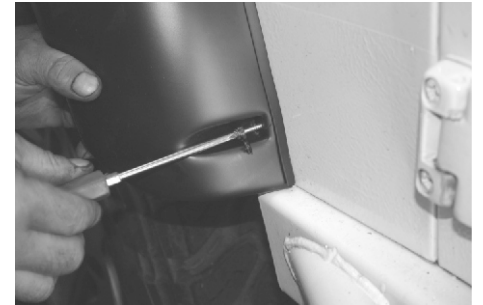

6. Repeat on the other 3 arches.

