



Manufactured in the UK by FLATDOG UK LTD
www.flatdoguk.com


LAND ROVER DEFENDER 110

FLATDOG
RAX

**FITTING INSTRUCTIONS
REAR RAIL KIT**

Defender 110 Rear Rail Kit

BACK

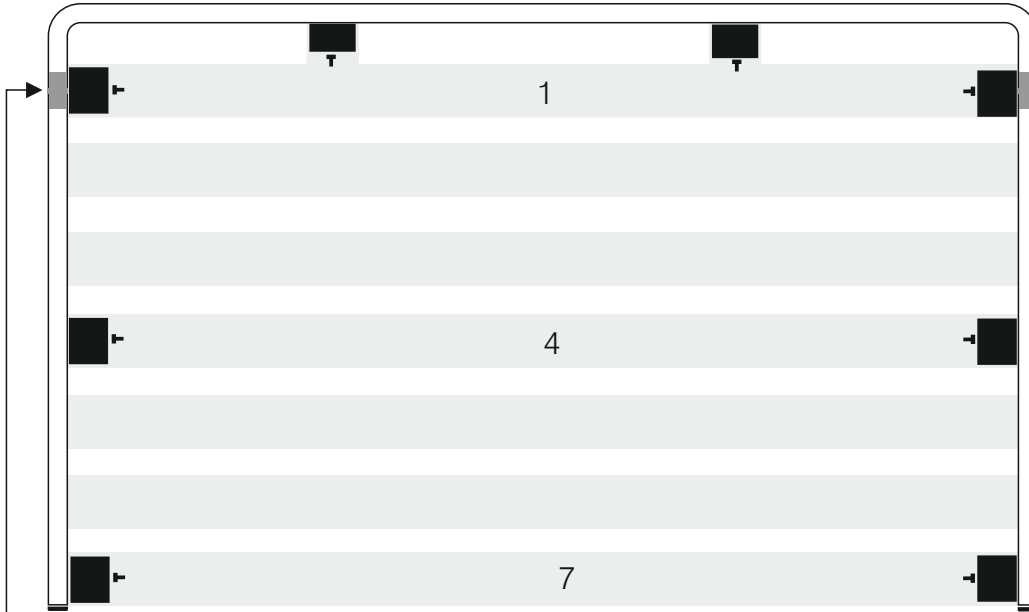

1. Slide the M8 bolts on the rails shown in the diagram and bolt into the brackets into position.
2. Offer up the rear rail and bolt into position with M6 bolts.
3. Insert the side rail connectors, making sure the 2 design lines are facing out, then bolt up with M6 bolts.
4. Once in position tighten all bolts and apply finishing caps.

